


EZ Carry

Owner's Operating Manual

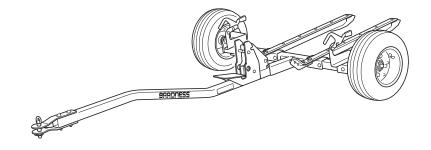

Serial No. TR50: 10066-

"Required reading"

Read this manual and the Owner's Manual for the engine before using the machine.



TR50

Greeting

Thank you for purchasing the Baroness machine. This manual explains proper handling, adjustment, and inspection of your machine. Prior to use, carefully read this manual to thoroughly understand the contents for safe and correct operation.

We hope you will use the machine safely, and take advantage of its best performance.

Introduction

Read this manual carefully to ensure that you thoroughly understand how to properly operate and maintain this machine, and to avoid causing injury to yourself or others.

The operator is responsible for operating the machine properly and safely.

Do not perform maintenance on the machine other than that described in this manual.

Maintenance should only be performed by a certified specialist.

If you have any questions concerning maintenance or genuine parts, please contact your local Baroness dealer or Kyoeisha.

When making inquiries about this machine, please specify the machine's model designation and serial number.

When loaning or transferring this machine, please also provide this manual together with the machine.

Kyoeisha Co., Ltd.



The information described in this manual is subject to change for improvement without prior notice. When replacing parts, be sure to use genuine Baroness parts or parts designated by Kyoeisha. Note that the Baroness product warranty may not apply to defects caused by the use of parts from other companies.

Warning Symbols

This manual uses the following warning symbols for handling precautions that are important for your safety.



Warning symbol

696cq5-001

This symbol indicates the articles regarding "Danger," "Warning," or "Caution."

Those articles describe important safety precautions and so read them carefully to understand completely before operating the machine.

Failure to adequately follow these safety precautions may cause an accident.



This symbol indicates that serious injury or death will occur if the warning is ignored.



This symbol indicates that serious injury or death may occur if the warning is ignored.



This symbol indicates that injury or damage to property may occur if the warning is ignored.

Important

This symbol indicates precautions on the mechanism of the machine.

Introduction

Purpose

This machine is intended for transporting Baroness walk behind reel mower. (LM18/56/66/101 series)

Do not use this machine in any way other than its intended purpose, and do not modify the machine.

Operating this machine for other purposes and modifying it may be very dangerous and may cause damage to the machine.

In addition, this machine do not operate it on public roads.

Contents

Safety	Page 1-1
Safe Operating Practices	Page 1-2
Disposal	Page 2-1
Recycle and Waste Disposal	Page 2-2
Product Overview	Page 3-1
Specifications Names of Each Section Safety Signs and Instruction Signs	Page 3-2 Page 3-4
Handling Instructions	Page 4-1
Preparation for Use Inspection Before Use Tightening torques Adjustment Before Operating Operation of Each Section Travel of Machine Loading and Unloading Towing Transporting	Page 4-7 Page 4-8 Page 4-10 Page 4-13 Page 4-14 Page 4-15
Maintenance	Page 5-1
Maintenance Precautions	Page 5-3 Page 5-4 Page 5-6

TR50

Contents

Safe Operating Practices	Page	1-2
Training	.Page	1-2
Preparation	. Page	1-2
Operation	.Page	1-2
Maintenance and Storage	Page	1-2
Towing	. Page	1-2

Safety

Failure to adequately follow these safety precautions may cause an accident resulting in injury or death.

♠ Danger

This machine is designed to ensure safe operation and has been tested and inspected thoroughly before shipment from the factory. The machine is equipped with safety devices to prevent accidents.

However, whether the machine demonstrates its original performance level depends on the manner in which it is operated and handled, as well as the manner in which it is managed on a daily basis.

Inappropriate use or management of the machine may result in injury or death. Observe the following safety instructions to ensure safe operation.

Safe Operating Practices

Training

- 1. Read this manual and other training material carefully.
 - Be familiar with the controls, safety signs, and the proper use of the equipment.
- 2. If the operator or mechanic can not read English it is the owner's responsibility to explain this material to them.
- 3. All operators and mechanics should seek and obtain professional and practical instruction.
 - The owner is responsible for training the
- Never allow children or people unfamiliar with these instructions to use or service the machine.
 - Local regulations may restrict the age of the operator.
- The owner/user can prevent and is responsible for accidents or injuries occurring to themselves other people, or property.
- Keep in mind that the owner, operator, and mechanic are responsible for accidents or hazards occurring to other people or their property.
- 7. You can find additional safety information where needed throughout this manual.
- 8. Determine the left and right sides of the machine from the normal operating position.

Preparation

- Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by the manufacturer.
- Inspect the area where the equipment is to be used and remove all objects such as rocks, toys and wire which can be thrown by the machine.

Operation

- 1. Take care when loading or unloading the machine into a trailer or a truck.
- Fasten the machine to the truck with a rope or other suitable restraining device that has sufficient strength.
- 3. When using a running board, select one with sufficient strength, length, and width and that will not cause the machine to slip.

Maintenance and Storage

- 1. Stop the machine on the level ground before adjusting, cleaning or repairing.
- Appropriately manage and correctly use the tools necessary for servicing or adjusting the machine.
- 3. Carefully release pressure from components with stored energy.
- Keep all parts in good working condition and all hardware tightened.
 Replace all worn or damaged decals.
- Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition.

Towing

 Follow the manufacturer's recommendation for weight limits for towed equipment and towing on slopes.

Disposal

Sa
Ö
S
$\bar{\Box}$

Recycle and Waste Dispo	sal Page	2-2
About Recycle	Page	2-2
About the Waste disposal	Page	2-2

Disposal

Recycle and Waste Disposal

About Recycle

Recycling battery etc. is recommended for environmental conservation and economical use of resources.

It may be required by local laws.

About the Waste disposal

Make sure that waste generated when servicing or repairing the machine is disposed of in accordance with local regulations. (e.g. waste oil, antifreeze, rubber products, and wires etc.)

Specifications	. Page 3-2
Specifications	Page 3-2
Names of Each Section	Page 3-2
Serial Number Plate	Page 3-3
Safety Signs and Instruction Signs	. Page 3-4
About Safety Signs and Instruction Signs Positions of Safety Decals and	Page 3-4
Instruction Decals	Page 3-4
Description of Safety Decals and Instruction Decals	Page 3-5

Product Overview


Specifications

Specifications

Model			TR50			
Type (Loading method)		Mower drums		Mower tires		
	Total length		266 cm	104.72 in	273 cm	107.48 in
		18" mower	138 cm	54.33 in	←	
Dimensions	Total width	22" mower	147 cm	57.87 in	←	
Difficusions	Width	26" mower	157 cm	61.81 in	←	
	Total height	Tire	41 cm	16.14 in	←	
Weight		58 kg	127.87 lb	69 kg	152.12 lb	
Maximum inclination for operation			15 degrees		←	
Tire size			16 x 6.50-8		←	
Tire pneumatic pressure			200 kPa (2.0 kgf/cm ²)	29.01 psi	←	
Applicable towing vehicle Towing capacity		200 kg or more	440.92 lb or more	←		

Names of Each Section

TR50 (Loading method : Mower drums)

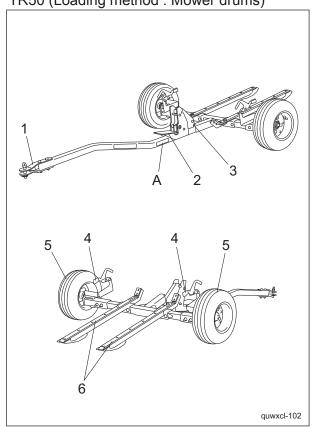


Names of Each Section_001

1	Hitch
2	Pedal
3	Axle lock lever
4	Drum shaft lock lever
5	Tire
6	Tilting table
Α	Serial number plate

Page 3-2 Specifications

TR50 (Loading method : Mower tires)

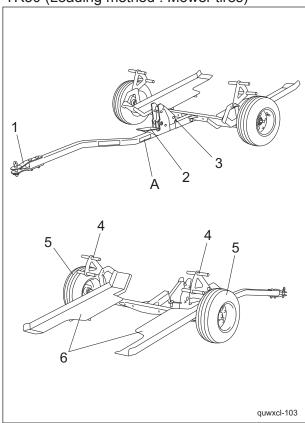


Names of Each Section_002

1	Hitch
2	Pedal
3	Axle lock lever
4	Mower tire lock lever
5	Tire
6	Tilting table
Α	Serial number plate

Serial Number Plate

The serial number plate indicates the model and serial number of the machine.

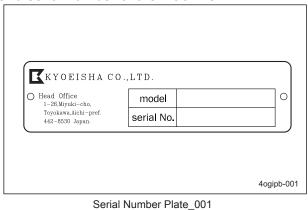

Names of Each Section Page 3-3

Product Overview

Safety Signs and Instruction Signs

About Safety Signs and Instruction Signs


Important

Safety decals and instruction decals are attached to this machine.

Make sure that they are preserved in their entirety. If they are damaged, become dirty, or peel off, replace them with new ones.

Part numbers for decals that need to be replaced are listed in the parts catalog. Order them from a Baroness dealer or Kyoeisha.


Positions of Safety Decals and Instruction Decals

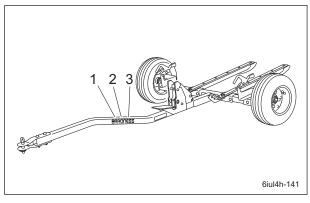

Positions of Safety Decals and Instruction Decals_001

1	DECAL, READ OWNERS MANUAL
2	DECAL, ATTENTION AT SLOPE
3	DECAL, PROHIBITED TO RIDE ON

<u>Description of Safety Decals and Instruction Decals</u>

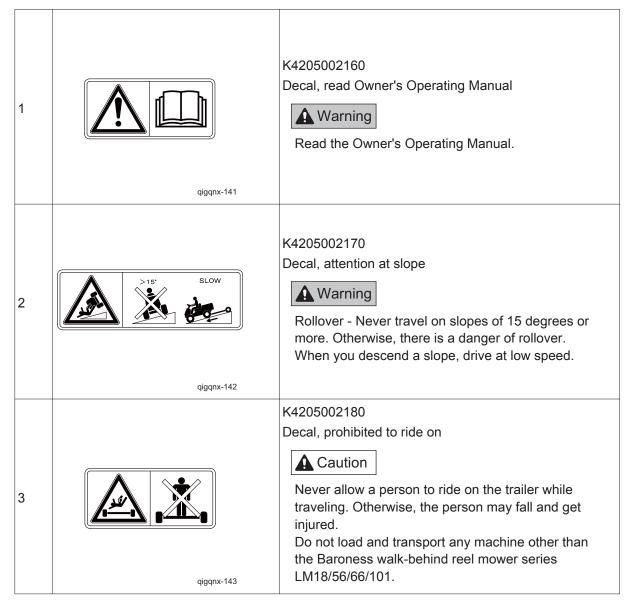

Product Overview

Preparation for Use	Page 4-2
Connection between Axle Section and Tilting Tables	Page 4-3 Page 4-3 Page 4-6
Connection Method of Mower Trailer .	
Inspection Before Use	Page 4-7
Tire Hitch Stay Pedal Hook	Page 4-7 Page 4-7
Tightening torques	Page 4-8
Standard tightening torques Principal tightening torques	_
Adjustment Before Operating	Page 4-10
Adjustment of Tread Width Adjustment of Trailer Hitch Adjustment of Drum Stopper	Page 4-11
Operation of Each Section	Page 4-13
Precautions for Operating the Machine Cautions for When You Leave the	Page 4-13
Machine	Page 4-13 Page 4-14 Page 4-14
Travel of Machine	. Page 4-14
Traveling Procedure	Page 4-14
Loading and Unloading	Page 4-15
Loading procedure of Greens Mower Unloading Procedure of Greens	Page 4-15
Mower	Page 4-16
Towing	Daga 4 16

Precautions for Towing	Page 4-16
Towing Procedure	. Page 4-16
Transporting	Page 4-17

Preparation for Use


<u>Connection between Axle Section and Tilting Tables</u>

Connection between Axle Unit and Tilting Tables (Mower Drums)

Note:

Depending on the specifications, this function may not be available.


- 1. Fit the tilting tables onto the axle unit.
- 2. Align the holes in the tilting tables and axle unit.

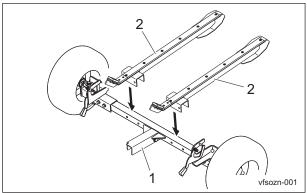

Connection between Axle Unit and Tilting Tables (Mower Drums)_001

1	Axle unit
2	Tilting table

3. Install the bolts to secure the axle unit and tilting tables.

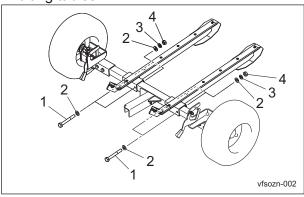

Connection between Axle Unit and Tilting Tables (Mower Drums)_002


1	Bolt
2	Washer
3	Spring washer
4	Nut

Connection between Axle Section and Tilting Tables (Mower Tires)

Note:

Depending on the specifications, this function may not be available.

1. Remove the bolts securing the axle section and tire section.

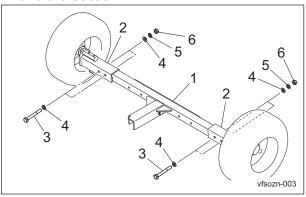

Connection between Axle Section and Tilting Tables (Mower Tires)_001


1	Axle section
2	Tire section
3	Bolt
4	Washer
5	Spring washer
6	Nut

2. Adjust the tread width.

Note:

The factory default position is that for a 22-inch mower.

- 3. Fit the tilting tables over the tire section.
- 4. Align the holes in the axle section, tire section and tilting tables.

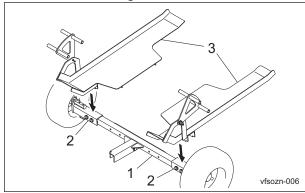


Connection between Axle Section and Tilting Tables (Mower Tires)_002

1	Axle section
2	Tire section
3	Tilting table

Page 4-2

Install the bolts removed in step 1 to secure the tilting tables, axle section and tire section.

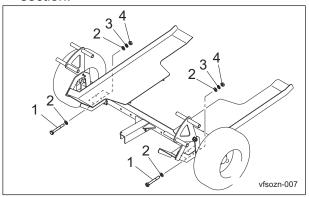


Connection between Axle Section and Tilting Tables (Mower Tires)_003

1	Bolt
2	Washer
3	Spring washer
4	Nut

Connection between Towing Section and Axle Section

- 1. Fit the towing section into the axle section.
- 2. Align the holes in the axle section and towing section.

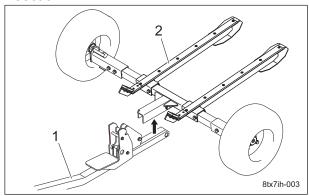


Connection between Towing Section and Axle Section_001

1	Towing section
2	Axle section

- 3. Apply grease to the pin, and then insert the pin through the holes of the axle section and towing section.
- 4. Install the washer.

5. Insert the cotter pin through the hole in the pin.

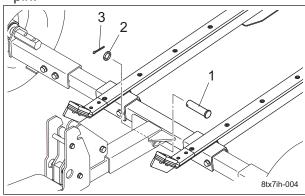


Connection between Towing Section and Axle Section_002

1	Pin
2	Washer
3	Cotter pin

Installation of Greens Mower Fixture

For the included parts to be installed on the greens mower, refer to the parts catalog of this machine.

1. Remove fulcrum bolts A and the nuts for the stand of the greens mower to be loaded.

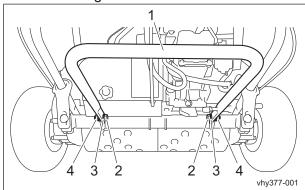


Installation of Greens Mower Fixture_001

_			
	1	Stand	
	2	Fulcrum bolt A	
	3	Washer	
	4	Nut	

Preparation for Use Page 4-3


2. Insert long fulcrum bolts B.

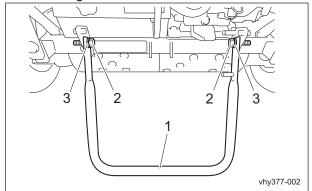

Installation of Greens Mower Fixture_002

1	Stand
2	Fulcrum bolt B
3	Washer

3. Temporarily install the side plate with the fulcrum bolt B and nut for the right side.

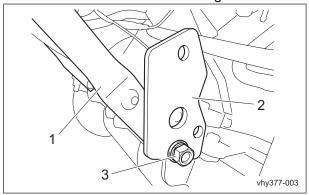


Installation of Greens Mower Fixture_003

1	Stand
2	Side plate
3	Nut

Important

The position for passing the clutch wire differs depending on the model of the greens mower. Be sure to pass the clutch wire at the correct position.


LM101
Pass the clutch wire below the fixture.

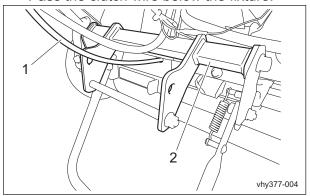

Installation of Greens Mower Fixture_004

1	Clutch wire
2	Fixture


LM18/56/66 series

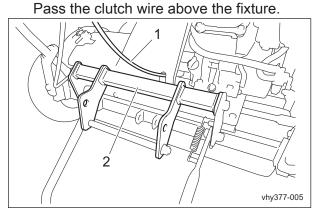

Installation of Greens Mower Fixture_005

1	Clutch wire
2	Fixture

4. Temporarily install the fixture with the fulcrum bolt B and nut for the left side.

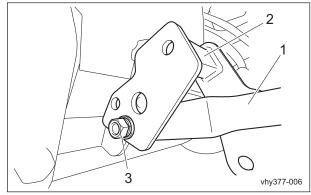


Installation of Greens Mower Fixture_006

1	Stand
2	Fixture
3	Nut

Page 4-4 Preparation for Use


5. Secure the fixture to the side plate on the right side with the bolt.

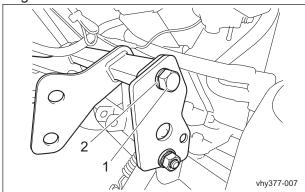

Installation of Greens Mower Fixture_007

1	Bolt
2	Spring washer

6. Align the holes in the stand mounting plate and in the fixture, and then secure them with the bolt and nut.

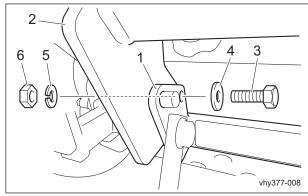

Installation of Greens Mower Fixture_008

1	Stand mounting plate	
2	Fixture	
3	Bolt	
4	Washer	
5	Spring washer	
6	Nut	


7. Tighten all bolts and nuts used to temporarily install the side plate and the fixture.

Important

The position for attaching the stand stay differs depending on the type of mower trailer that is used.

Attach it at the correct position.

8. Install the stand stay with the nuts.

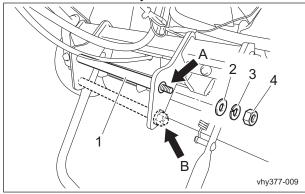

Installation of Greens Mower Fixture_009

	· · · · · · · · · · · · · · · · · · ·		
1	Stand stay		
2	Washer		
3	Spring washer		
4	Nut		
А	Position of stand stay for mower drums loading		
B Position of stand stay for mower to loading			

Preparation for Use Page 4-5

<u>Precautions for Connecting the Mower</u> Trailer



Be sure to connect and disconnect the mower trailer on a level surface.

Important

The total weight of the trailer and greens mower is approximately 200 kg (440.92 lb). Have a vehicle ready with the ability to tow more than this weight.

Important

Have a vehicle ready onto which the included pin $(\phi 20)$ can be installed.

If anything other than the included pin is used, the hitch may be damaged.

Important

Make sure that the towing vehicle hitch connected with the mower trailer is sufficiently strong.

Connection Method of Mower Trailer

Important

Be sure to install the clip pin so that the pin will not fall out during transportation.


Important

When connecting the mower trailer to the towing vehicle, adjust the trailer hitch so that the traction bar is parallel to the ground.


Important

The clip pin has a specific installation orientation.

If the clip pin is installed with the wrong orientation, it may fall out.

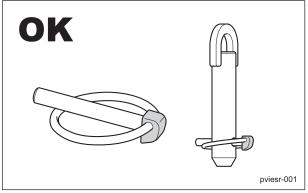


Connection Method of Mower Trailer 001

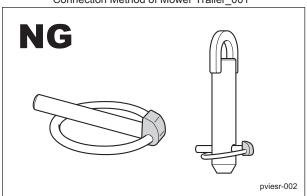

Connection Method of Mower Trailer_002

- 1. Install the included pin into the hitch.
- 2. Check the orientation of the clip pin, and then install it so that it will not fall out.

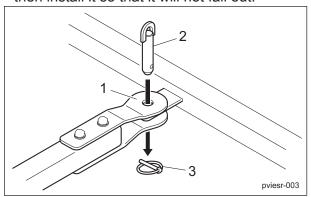

Connection Method of Mower Trailer_003

1	Hitch
2	Pin
3	Clip pin

Page 4-6 Preparation for Use

Inspection Before Use

Be sure to perform an inspection before you start using the machine so that you will be able to take advantage of its optimum performance for a long period of time.

Tire

Inspection of Tires


- 1. Check the pneumatic pressure of the tires.
- 2. Make sure that there are no cracks, damage or abnormal wear.

Tire size	Pneumatic pressure		
16 x 6.50-8	200 kPa (2.0 kgf/cm ²)		

Hitch

Inspection of Hitch

- 1. Make sure that there is no wear or deterioration of the hitch.
- 2. Make sure that there is no damage to the hitch.
- 3. Make sure that there is no deformation of the hitch.

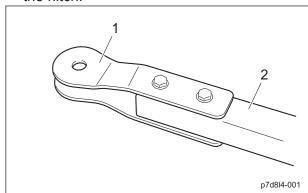


Inspection of Hitch_001

1	Hitch
2	Traction bar

<u>Stay</u>

Inspection of Stand Stay

- 1. Make sure that there is no wear or deterioration of the stand stay.
- 2. Make sure that there is no damage to the stand stay.
- 3. Make sure that there is no deformation of the stand stay.

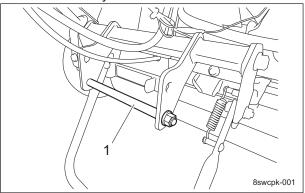


Inspection of Stand Stay_001

1	Stand stav

Pedal Hook

Inspection of Pedal Hooks

- Make sure that there is no wear or deterioration of the pedal hooks of the pedal and frame.
- 2. Make sure that there is no damage to the pedal hooks of the pedal and frame.
- 3. Make sure that there is no deformation of the pedal hooks of the pedal and frame.

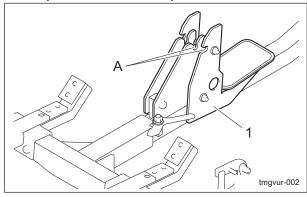

Inspection of Pedal Hooks_001

1	Pedal
Α	Hook

Tightening torques

Standard tightening torques

Bolts and Nuts

Important

A number of bolts are used in each part of this machine.

Be sure to re-tighten the bolts and nuts, because they may be loosened at the earlier stage of the use.

As to the bolts and nuts without any special instruction, tighten them in appropriate tightening torque with proper tool.

Too much tightening may cause the looseness or damage of the screw.

The strength of tightening is determined by types of screws, strength, the friction of thread face or base face and others.

The table below is for the galvanized or parkerized bolts.

In case that the strength of internal thread is weak, it is not applied.

Do not use rusty or sand attached "screw."

Otherwise, it may cause insufficient tightening even if you apply the specified tightening torque.

The friction of the screw face becomes higher and the tightening torque is canceled out by the friction, therefore sufficient tightening cannot be applied.

If "screw" is wet by water or oil, do not tighten it with normal tightening torque.

If the screw is wet, the torque coefficient will get smaller and it may result in too much tightening.

Too much tightening may cause looseness by the screw stretched or result in damage.

Do not use a bolt experienced too much burden.

Using the impact wrench requires the skill.

Do exercise as much as possible for steady tightening.

	General bolt				
	Strength classification 4.8				
Nominal diameter	M 4 T (1,8) tib3yb-001				
	N-m	kgf-cm	lb-in		
M5	3 - 5	30.59 - 50.99	26.55 - 44.26		
M6	7 - 9	71.38 - 91.77	61.96 - 79.66		
M8	14 - 19	142.76 - 193.74	123.91 - 168.17		
M10	29 - 38	295.71 - 387.49	256.68 - 336.34		
M12	52 - 67	530.24 - 683.20	460.25 - 593.02		
M14	70 - 94	713.79 - 958.52	619.57 - 831.99		
M16	88 - 112	897.34 - 1142.06	778.89 - 991.31		
M18	116 - 144	1,182.85 - 1,468.37	1,026.72 - 1,274.54		
M20	147 - 183	1,498.96 - 1,866.05	1,301.10 - 1,619.73		
M22	295	3,008.12	2,611.05		
M24	370	3,772.89	3,274.87		
M27	550	5,608.35	4,868.05		
M30	740	7,545.78	6,549.74		

Page 4-8 Tightening torques

	Heat-treated bolt							
	Strength classification 8.8				Strength classification 10.9			
Nominal diameter	8 8 T (8.8) tib3yb-002				11 (11T) (10.9) tib3yb-003			
	N-m	kgf-cm	lb-in	N-m	kgf-cm	lb-in		
M5	5 - 7	50.99 - 71.38	44.26 - 61.96	7 - 10	71.38 - 101.97	61.96 - 88.51		
M6	8 - 11	81.58 - 112.17	70.81 - 97.36	14 - 18	142.76 - 183.55	123.91 - 159.32		
M8	23 - 29	234.53 - 295.71	203.57 - 256.68	28 - 38	285.52 - 387.49	247.83 - 336.34		
M10	45 - 57	458.87 - 581.23	398.30 - 504.51	58 - 76	591.43 - 774.97	513.36 - 672.68		
M12	67 - 85	683.20 - 866.75	593.02 - 752.34	104 - 134	1,060.49 - 1,366.40	920.50 - 1186.03		
M14	106 - 134 1,080.88 - 1,366.40 938.21 - 1,186		938.21 - 1,186.03	140 - 188	1,427.58 - 1,917.04	1,239.14 - 1,663.99		
M16	152 - 188		1,345.35 - 1,663.99	210 - 260	2,141.37 - 2,651.22	1,858.71 - 2,301.26		
M18	200 - 240	2,039.40 - 2,447.28	1,770.20 - 2,124.24	280 - 340	2,855.16 - 3,466.98	2,478.28 - 3,009.34		
M20	245 - 295	2,498.27 - 3,008.12	2,168.50 - 2,611.05	370 - 450	3,772.89 - 4,588.65	3,274.87 - 3,982.95		
M22	-	-	-	530	5,404.41	4,691.03		
M24	-	-	-	670	6,831.99	5,930.17		
M27	-	-	-	1,000	10,197.00	8,851.00		
M30) 1,		1,340	14,628.78	11,860.34			

Note:

The same values are applied to "fine screw thread."

Principal tightening torques

Tightening Torque by Model

TR50

Tighten the following bolts and nuts at the torque specified in the table.

For thread locking adhesive, apply a middle strength thread locker (ThreeBond 1322 or equivalent anaerobic sealant).

	Code	Part name	Tightening torque			Thread
Location			N-m	kgf-cm	lb-in	locking adhesive
Axle	K0013100802	BOLT, HT M10-80	58 - 76	591.43 - 774.97	513.36 - 672.68	-
Tilting Table	K0013100802	BOLT, HT M10-80	58 - 76	591.43 - 774.97	513.36 - 672.68	-

Tightening torques Page 4-9

Adjustment Before Operating


Adjustment of Tread Width

Adjustment of Tread Width (Mower Drums)

Note:

Depending on the specifications, this function may not be available.

1. Remove the bolts securing the axle section and tire section.

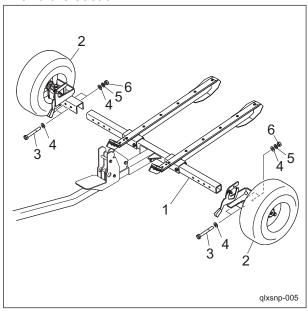


Adjustment of Tread Width (Mower Drums)_001

1	Axle section
2	Tire section
3	Bolt
4	Washer
5	Spring washer
6	Nut

2. The installation position of the axle holes differs depending on the greens mower to be loaded.

Align the appropriate holes in the axle section and tire section.

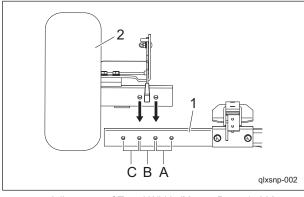

Adjustment of Tread Width (Mower Drums)_002

1	Axle section
2	Tire section
Α	18-inch mower
В	22-inch mower
С	26-inch mower

- 3. Install the bolt removed in step 1 to secure the axle section and tire section.
- 4. Follow the same steps to adjust the opposite side.

Note:


The factory default position is that for a 22-inch mower.

Adjustment of Tread Width (Mower Tires)

Note:

Depending on the specifications, this function may not be available.

1. Remove the bolts securing the axle section, tire section and tilting tables.

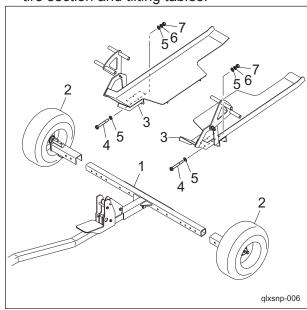


Adjustment of Tread Width (Mower Tires)_001

1	Axle section
2	Tire section
3	Tilting table
4	Bolt
5	Washer
6	Spring washer
7	Nut

2. The installation position of the axle holes differs depending on the greens mower to be loaded.

Align the appropriate holes in the axle section, tire section and tilting table.

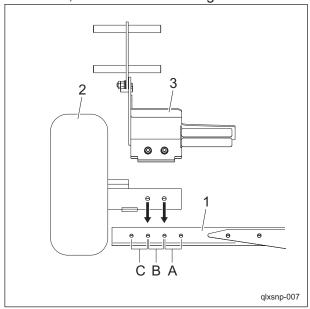


Adjustment of Tread Width (Mower Tires)_002

1	Axle section
2	Tire section
3	Tilting table
Α	18-inch mower
В	22-inch mower
С	26-inch mower

- 3. Install the bolt removed in step 1 to secure the axle section, tire section and tilting table.
- 4. Follow the same steps to adjust the opposite side.

Adjustment of Trailer Hitch

When connecting the mower trailer to the towing vehicle, adjust the trailer hitch if the traction bar is not parallel to the ground.

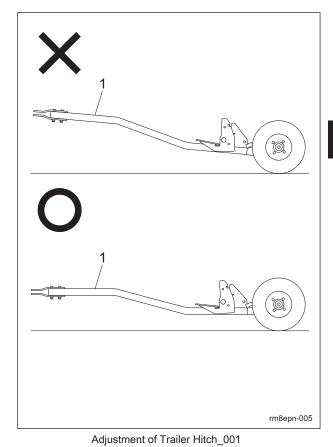


The hitch can be adjusted to one of three heights.

Remove the bolt securing the hitch, and then install the hitch at the height that fits the towing vehicle.

Traction bar


Standard hitch installation
 The height from the ground to the trailer hitch is 299 mm (11.77 in).

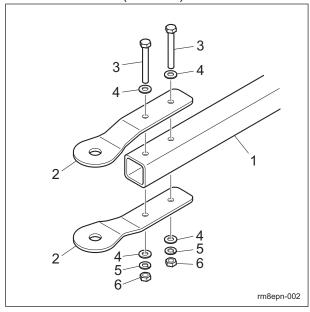

Adjustment of Trailer Hitch_002

1	Traction bar
2	Hitch
3	Bolt
4	Washer
5	Spring washer
6	Nut


High hitch installation
 The height from the ground to the trailer hitch is 329 mm (12.95 in).

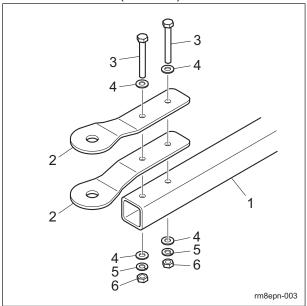

Adjustment of Trailer Hitch_003

1	Traction bar
2	Hitch
3	Bolt
4	Washer
5	Spring washer
6	Nut

Low hitch installation
 The height from the ground to the trailer hitch is 270 mm (10.63 in).

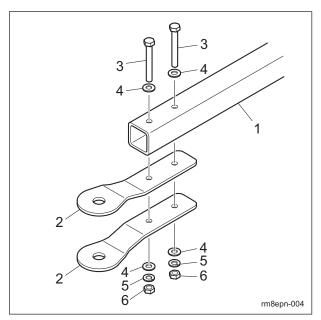

Adjustment of Trailer Hitch_004

1	Traction bar
2	Hitch
3	Bolt
4	Washer
5	Spring washer
6	Nut

Note:


The factory default position is the standard hitch installation.

Adjustment of Drum Stopper

Note:


Depending on the specifications, this function may not be available.

When a greens mower is loaded onto the mower trailer, adjust the gap between the drum and drum stopper if it is 4.5 mm (0.177 in) or more.

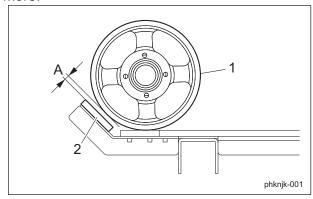

Adjustment of Drum Stopper_001


1. Remove the screw securing the drum stopper, and then add the spacer.

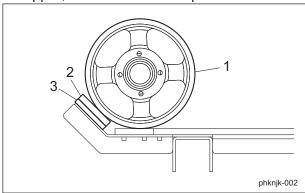

Adjustment of Drum Stopper_002

1	Drum
2	Drum stopper
3	Spacer

2. Make sure that the stand stay can be secured by the hooks.

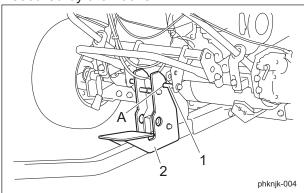

Adjustment of Drum Stopper 003

•	•• –
1	Stand stay
2	Pedal
Α	Hook

Operation of Each Section

Precautions for Operating the Machine



A Caution

Under any circumstances drive the machine at such a speed that you can stop it immediately for emergencies.

Cautions for When You Leave the Machine




A Caution

Use wheel stoppers to secure the trailer.

Pedal

The pedal is used to release the connection between the greens mower stand stay and the pedal hooks of the mower trailer.

To release the connection between the greens mower stand stay and the pedal hooks of the mower trailer, depress the pedal to set it to the "Release" position.

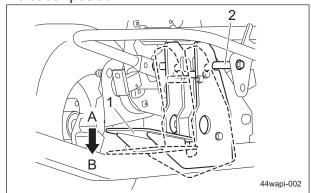

Pedal 001


	-
1	Pedal
2	Stand stay
Α	Lock
В	Release

Axle Lock Lever

The axle lock lever secures the angle of the tilting tables.

When loading the greens mower onto the mower trailer for towing, set the lever to the "Lock" position.

When unloading the greens mower from the mower trailer, set the lever to the "Release" position.

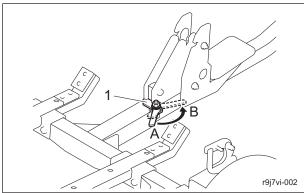

Axle Lock Lever_001

1	Axle lock lever
Α	Lock
В	Release


Drum Shaft Lock Lever

Note:

Depending on the specifications, this function may not be available.

The drum shaft lock lever prevents the greens mower from falling from the mower trailer. When loading the greens mower onto the mower trailer for towing, set the drum shaft lock lever to the "Lock" position.

When unloading the greens mower from the mower trailer, set the drum shaft lock lever to the "Release" position.

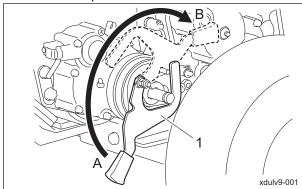

Drum Shaft Lock Lever_001

Drum shaft lock lever
Lock
Release

Mower Tire Lock Lever


Note

Depending on the specifications, this function may not be available.

The mower tire lock lever prevents the greens mower from falling from the mower trailer.

When loading the greens mower onto the mower trailer for towing, set the mower tire lock lever to the "Lock" position.

When unloading the greens mower from the mower trailer, set the mower tire lock lever to the "Release" position.

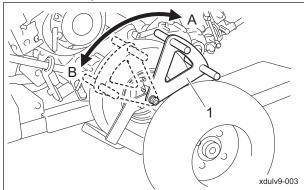

Mower Tire Lock Lever_001

1	Mower tire lock lever
Α	Lock
В	Release

Travel of Machine

Traveling Procedure

- 1. Lift up the tilting tables.
- 2. Secure the axle with the axle lock lever.
- 3. Move the mower trailer by pulling the traction bar so that the tilting tables do not touch the ground.

Page 4-14 Travel of Machine

Loading and Unloading

Loading procedure of Greens Mower



▲ Caution

Before loading or unloading, chock the wheels of the mower trailer on a level surface in a safe location.



Caution


Be careful not to catch your foot on the mower trailer and fall.



A Caution

Since the tilting tables may bounce up, make sure that there are no people around the machine.

- 1. Set the axle lock lever to the "Release" position, and then lower the tilting tables to the ground.
- 2. Place the greens mower facing backward towards the tilting tables.

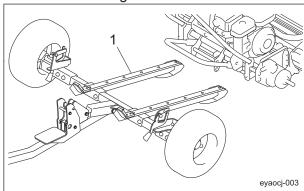


Loading procedure of Greens Mower_001

Tilting table

3. Move the greens mower backward to load it onto the tilting tables of the mower trailer.

4. Insert the stand stay of the greens mower into the pedal hooks to secure it.

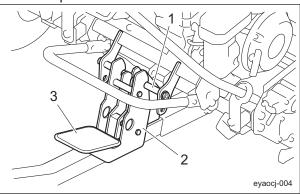

Loading procedure of Greens Mower_002

1	Stand stay
2	Pedal hook
3	Pedal

- 5. Set the axle lock lever to the "Lock" position.
- 6. Set the drum shaft lock lever or mower tire lock lever to the "Lock" position.
- 7. Set the fuel cock of the greens mower to the "Close" position.

Unloading Procedure of Greens Mower



A Caution

Before loading or unloading, chock the wheels of the mower trailer on a level surface in a safe location.



Caution

Be careful not to catch your foot on the mower trailer and fall.



A Caution


Make sure that there are no people around the machine.



A Caution

When unloading the greens mower, be extremely careful as it may suddenly pull on your hand.

- 1. Set the drum shaft lock lever or mower tire lock lever to the "Release" position.
- 2. Set the axle lock lever to the "Release" position.
- 3. Depress the pedal to release the stand stay of the greens mower from the pedal hooks.

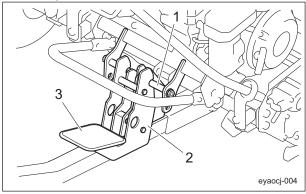

Unloading Procedure of Greens Mower_001

1	Stand stay
2	Pedal hook
3	Pedal

- 4. Bring the front roller into contact with the tilting tables, and then lower the tilting tables to the ground.
- 5. Move the greens mower forward to unload it from the mower trailer.

Towing

Precautions for Towing



A Warning

When towing, travel at a speed no more than

Travel slowly over bad roads and uneven surfaces.



Warning

Make turns at a low speed.

Making quick turns may cause the towing vehicle to roll over.



▲ Caution

Since the towing vehicle and the mower trailer articulate at the hitch, a large turning radius difference occurs in curves.

Be mindful of the risk of collisions caused by a turning radius difference.



▲ Caution

Before traveling in reverse, make sure that there are no people behind you.

Travel in reverse at low speed while carefully observing the movement of the trailer.



Caution

Be careful that the tow vehicle does not make contact with the trailer and overturn while going backward with turning on a slope.

Towing Procedure

- 1. Make sure that the pedal hooks are secured onto the stand stay of the greens mower.
- 2. Make sure that the drum shaft lock lever or mower tire lock lever is set to the "Lock" position so that the greens mower will not fall.
- 3. Make sure that the axle lock lever is set to the "Lock" position so that the tilting tables do not touch the ground.
- 4. Make sure that the towing vehicle and mower trailer are securely connected.
- 5. Start moving the towing vehicle slowly, and then maintain the traveling speed.

Page 4-16 Towing

Transporting

Transporting Procedure

Before loading into a truck or trailer for transporting, disconnect from the towing vehicle.

When using a running board:

When loading into a truck or trailer for transporting, pull the traction bar. When unloading, push the traction bar.

When using a pallet:

When using a truck or trailer for transporting, place the mower trailer on the pallet before loading or unloading it.

Transporting Page 4-17

Page 4-18 Transporting

Maintenance Precau	tions Page	5-2
Maintenance Schedu	ılePage	5-3
Specified value	Page	5-3
Lubrication	Page	5-4
	Page	
Maintenance (Main E	Body) Page	5-6
-	TiresPage ock LeverPage	
Adjustment of Drum Lever Adjustment of Mowe	Page	5-6
	Page	5-7
Long-Term Storage .	Page	5-7
Refore Long-Term S	toragePage	5_7

Maintenance

Maintenance Precautions



A Caution

First, learn well the maintenance operations you plan to perform.

Important

Use tools appropriate for each maintenance operation.

Important

For the safe and best performance of your machine, use Baroness genuine parts for replacement and accessories.

Please note that our product warranty may be void if you use non-genuine parts for replacement or accessories.

Maintenance Schedule

Follow the maintenance schedule below.

O - - Inspect, adjust, supply, clean

• • • Replace (first time)

△ · · · Replace

Maintenance Item	Before Work	When Required	Remarks
Check tire pressures and condition	0		Refer to "Inspection of Tires"
Check wear and damage of hitch	0		Refer to "Inspection of Hitch"
Check wear and damage of pedal hook	0		Refer to "Inspection of Pedal Hook"
Check wear and damage of stand stay	0		Refer to "Inspection of Stand Stay"
Check damaged parts	0		
Check tightening bolts and nuts	0		
Lubricate all moving parts		0	Refer to "Lubricating Points"
Adjustment of operating force of mower tire lock lever (loading method : mower tires)		0	Refer to "Adjustment of Mower Tire Lock Lever"
Adjustment of operating force of drum shaft lock lever (loading method : mower drums)		0	Refer to "Adjustment of Drum Shaft Lock Lever"
Adjustment of operating force of axle lock lever		0	Refer to "Adjustment of Axle Lock Lever"

 $[\]boldsymbol{\cdot}$ The values for consumables are not guaranteed.

Specified value

Pneumatic pressure of tire	200 kPa (2.0 kgf/cm ²)	16 x 6.50-8
Operating force of axle lock lever	15 - 30 N-m (153 - 306 kgf-cm)	
Operating force of drum shaft lock lever	30 - 50 N-m (306 - 510 kgf-cm)	
Operating force of mower tire lock lever	40 - 60 N-m (408 - 612 kgf-cm)	

Maintenance Schedule Page 5-3

Maintenance

Lubrication

About Lubrication

It is necessary to lubricate moving parts so that they will not become stuck or damaged.

The locations where lubricant is used are indicated in "Lubricating Points".

Apply the lubricant.


Lubricating Points

Lubricating Points (Mower Drums)

Note:

Depending on the specifications, this function may not be available.


Apply lubricant at the following locations as necessary.

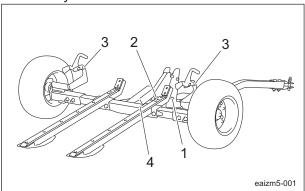

Lubricating Points (Mower Drums)_001


1	Pedal fulcrum	1
2	Axle lock lever	1
3	Drum shaft lock lever	2
4	Axle coupling pin	1

1. Pedal fulcrum

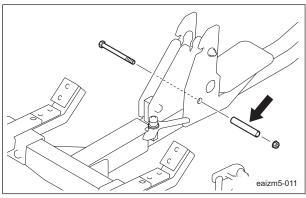


Lubricating Points (Mower Drums)_002

2. Axle lock lever

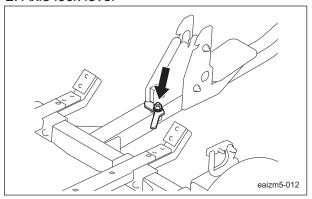


Lubricating Points (Mower Drums)_003

Drum shaft lock lever
 There is one point each on the left and right.

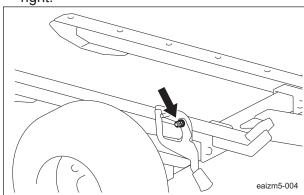

Lubricating Points (Mower Drums)_004

4. Axle coupling pin

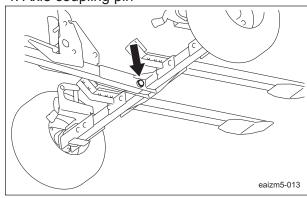

Lubricating Points (Mower Drums)_005


Page 5-4 Lubrication

Lubricating Points (Mower Tires)

Note:

Depending on the specifications, this function may not be available.


Apply lubricant at the following locations as necessary.

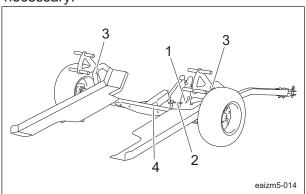

Lubricating Points (Mower Tires)_001


1	Pedal fulcrum	1
2	Axle lock lever	1
3	Mower tire lock lever	2
4	Axle coupling pin	1

1. Pedal fulcrum

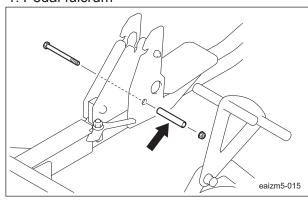


Lubricating Points (Mower Tires)_002

2. Axle lock lever

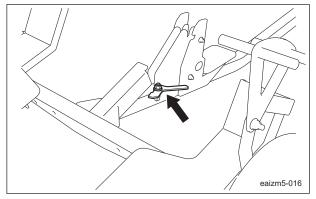


Lubricating Points (Mower Tires)_003

Mower tires lock lever There is one point each on the left and right.

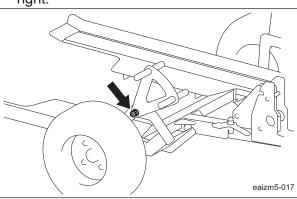

Lubricating Points (Mower Tires)_004

4. Axle coupling pin

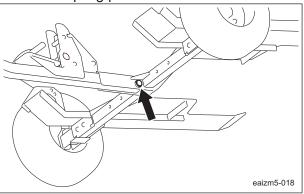

Lubricating Points (Mower Tires)_005


Maintenance

Maintenance (Main Body)

Removing/Installing Tires

Follow the steps below to remove the tires.

1. Remove the bolts.

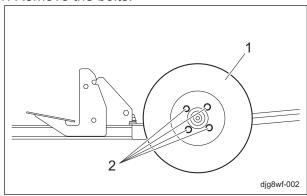

Removing/Installing Tires 001

1	Tire
2	Bolt

- 2. While lifting the tire up, pull it toward you to remove it from the wheel mounting seat.
- 3. Follow the same steps to remove the tire on the opposite side.



Refer to the Tightening Torque table. Note that the Baroness product warranty may not apply to defects caused by incorrect or overtorque tightening, etc.

Important

Tighten the bolts in the tightening order (diagonally).


For installing the tires, reverse the removing procedure.

Adjustment of Axle Lock Lever

Adjust the axle lock lever so that it moves when pushed with a finger.

The operating force of the axle lock lever is 15 - 30 N-m (153 - 306 kgf-cm).

Adjust by tightening the nut.

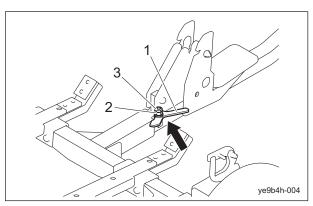

Adjustment of Axle Lock Lever_001

1	Axle lock lever
2	Nut
3	Lock nut

Adjustment of Drum Shaft Lock Lever


Note:

Depending on the specifications, this function may not be available.

Adjust the drum shaft lock lever so that it will not move by its own weight when lifted 90° from the "Lock" position, then released.

The operating force of the drum shaft lock lever is 30 - 50 N-m (306 - 510 kgf-cm).

Adjust by tightening the nut.

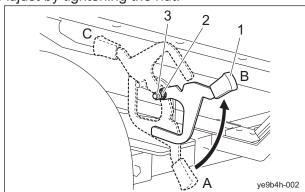

Adjustment of Drum Shaft Lock Lever_001

1	Drum shaft lock lever
2	Nut
3	Lock nut
Α	Lock
В	90-degree position
С	Release

Adjustment of Mower Tire Lock Lever


Note:

Depending on the specifications, this function may not be available.

Adjust the mower tire lock lever so that it will not move by its own weight when moved 30° from the "Lock" position, then released.

The operating force of the mower tire lock lever is 40 - 60 N-m (408 - 612 kgf-cm).

Adjust by tightening the nut.

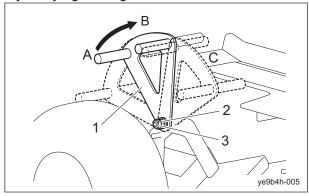

Adjustment of Mower Tire Lock Lever_001

1	Mower tire lock lever
2	Nut
3	Lock nut
Α	Lock
В	30-degree position
С	Release

Long-Term Storage

Before Long-Term Storage

- Completely remove dirt, grass clippings, debris, oil stains, etc.
- Supply oil and apply grease to appropriate parts.
- · Lower the tilting tables to the ground.
- Unload the greens mower from the mower trailer.
- Before disconnecting from the towing vehicle, use wheel stoppers to secure the trailer.

Long-Term Storage Page 5-7

Maintenance

Page 5-8 Long-Term Storage



