

LM315 Service Intervals

- Inspect, Adjust, Clean
- Replace (first time only)
- ▲ Replace

Maintenance Item	Before Work	After Work	Every Week	Every 10 hrs	Every 50 hrs	Every 75 hours	Every 100 hrs	Every 150 hours	Every 200 hrs	Every 400 hrs	Every 500 hrs	Every 800 hrs	Every 1500 hrs	Every 3000 hrs	Every year	Every 2 years	Every 4 years	When Required	
Check Engine Oil Level	○																		
Check Fuel Level	○																		
Check Coolant Level	○																		
Clean Radiator	○																		
Clean Oil Cooler	○																		
Clean Engine Area	○																		
Check Hydraulic Oil Level	○																		
Check Tyre Pressures & Condition	○																		
Check Blade Condition	○																		
Component Security (nuts, bolts, hoses etc)	○																		
Check Interlock System Safe Function	○																		
Check For Oil Leaks	○																		
Check Brakes Function	○																		
Check Air Filter Condition	○																		
Check condition of all Safety Covers	○																		
Grease Drive Cable (upper)	○																		
Clean Machine Exterior		○																	
Open Air Cleaner Evacuator Valve			○																
Grease Drive Cable (lower)				○															
Grease Groomer Gearbox (if fitted)				○															
Check Fuel Hose and Clamp Condition					○														
Grease & Lubricate all moving parts					○														
Check Rear Roller Brush Condition					○														
Check & Adjust Brakes					○														
Lubricate & Adjust Control Cables					○														
Backlap Blades																		○	As and when required but no later than every 50 hours
Check Battery Fluid Level						○													
Clean Fuel Filter & Pot							○												
Replace Hydraulic Oil							●			▲									100 hour first change, 500 hours thereafter
Replace Hydraulic Oil Filter							●			▲									100 hour first change, 500 hours thereafter
Check Fan Belt Tension							○												
Clean or Replace Air Filter							○								●				every year or every 6 cleanings, whichever comes first
Replace Engine Oil				●	▲														50 hour first change, every 75 hours thereafter
Replace Engine Oil Filter				●			▲												50 hour first change, every 150 hours thereafter
Check Radiator Hose Condition								○											Every 200 hours or 6 months, whichever comes first.
Check condition of Air Intake Line								○											
Replace Fuel Filter									▲										
Adjust Electro-Magnetic Clutch Spacing															○				
Remove Sediment From Fuel Tank										○									
Grease Bedknife Pivot Bushes and Pins										○									
Replace Hydraulic Suction Filter										▲									
Flush the Radiator & Cooling System										○									
Replace Fan Belt										▲									
Adjust Engine Valve Clearances											○								
Replace Inner Drive Cables											▲								
Grease Reel Bearings															○				
Check the condition of electrical wiring															○				
Replace Drive Cable 'V' Belts															▲				
Replace Coolant & Anti Freeze																▲			
Replacement of Fuel Pipes & Clamps																▲			
Replacement of Radiator Hoses & Clamps																▲			
Replacement of air intake hose																▲			
Replace Hydraulic Hoses (Moving Part)																▲			
Replace Hydraulic Hoses (Fixed Part)																	▲		
Replace Battery																		▲	
Replace Brake Shoes																		○	Replace Brake Pads as and when required
Replace Brake Cables																		▲	
Regrind Blades																		○	Regrind/Replace blades as and when required
Check Fuel Injection Nozzle Pressures													○						
Injection Pump Check/Service															○				