

**LM56/66 Service Intervals**

- Inspect, Adjust, Clean
- Replace (first time only)
- ▲ Replace

Maintenance Item	Before Work	After Work	Every 10 hours	Every 20 hours	Every 50 hrs	Every 100 hrs	Every 200 hrs	Every 300 hrs	Every 500 hrs	Every year	Every 2 years	When Required
Check Engine Oil Level	○											
Check Fuel Level	○											
Clean Engine & Muffler Area	○											
Check Tyre Pressures & Condition	○											
Check Blade Condition	○											
Component Security (nuts, bolts, hoses etc)	○											
Check Interlock System Safe Function	○											
Check For Oil & Fuel Leaks	○											
Check Brakes Function	○											
Check Air Filter Condition	○											
Check Condition of all Safety Guards	○											
Clean Machine Exterior		○										
Grease all Gearbox Points			○									
Change Engine Oil				●		▲						20 hour first change, every 100 hours thereafter
Check Fuel Hose Condition					○							
Grease Rollers and Reel Bearings					○							
Lubricate & Adjust Control Cables					○							
Backlap Blades					○							Every 50 hours or as and when required
Clean or Replace Air Filter					○		▲					Replace every 200 hours or after 6 cleanings, whichever comes first
Check Clutch Adjustment						○						
Check Starter Pull Cord Condition						○						
Check & Adjust Brakes							○					
Clean Carburettor Float Bowl & Sediment Trap							○					Drain float bowl if the machine is to be unused for more than 2 months
Clean and Adjust/Replace Spark Plug							○				▲	
Adjust Engine Valve Clearances								○				
Decoke Engine									○			
Check Handle Adjuster Rubber Condition										○		
Remove Sediment From Fuel Tank										○		
Clean and Grease Bedknife Eccentric Bushes										○		
Check the condition of electrical wiring										○		
Replacement of Fuel Pipes & Clamps											▲	
Replace Brake Cables												▲
Regrind Blades												○ Regrind/Replace blades as and when required